


NOTE 1

NOTE 2

NOTES

1. "GRD" TERMINAL NEAR CENTER OF SWITCH IS USED TO TERMINATE SHIELD GROUNDS FOR P-LEAD WIRES AS SHOWN IN SCHEMATIC BELOW. DO NOT CONNECT THIS TO ANY OTHER CONDUCTORS BEHIND PANEL.
2. "GRD" ADJACENT TO "R" TERMINAL BECOMES CONNECTED TO THE CENTER "GRD" TERMINAL DURING ENGINE CRANKING. BY INSTALLING A JUMPER BETWEEN THIS "GRD" TERMINAL AND "R" TERMINAL, THE RIGHT MAGNETO IS DISABLED DURING ENGINE CRANKING. IF THE RIGHT MAG IS FITTED WITH AN IMPULSE COUPLER, THE JUMPER IS NOT USED.
3. MAGNETO P-LEAD SHIELDS SHOULD BE CONNECTED TO ENGINE GROUND ONLY AT THE MAGNETO END.
4. TERMINALS "LR" AND "BO" ARE USED WITH A "SHOWER OF SPARKS SYSTEM." SEE SHEET 2.
5. THESE DRAWINGS ARE SUPPLEMENTARY INFORMATION TO AN ARTICLE ON MAGNETO SWITCH WIRING WHICH APPEARED IN SPORT AVIATION, JULY 1993, PAGE 56.

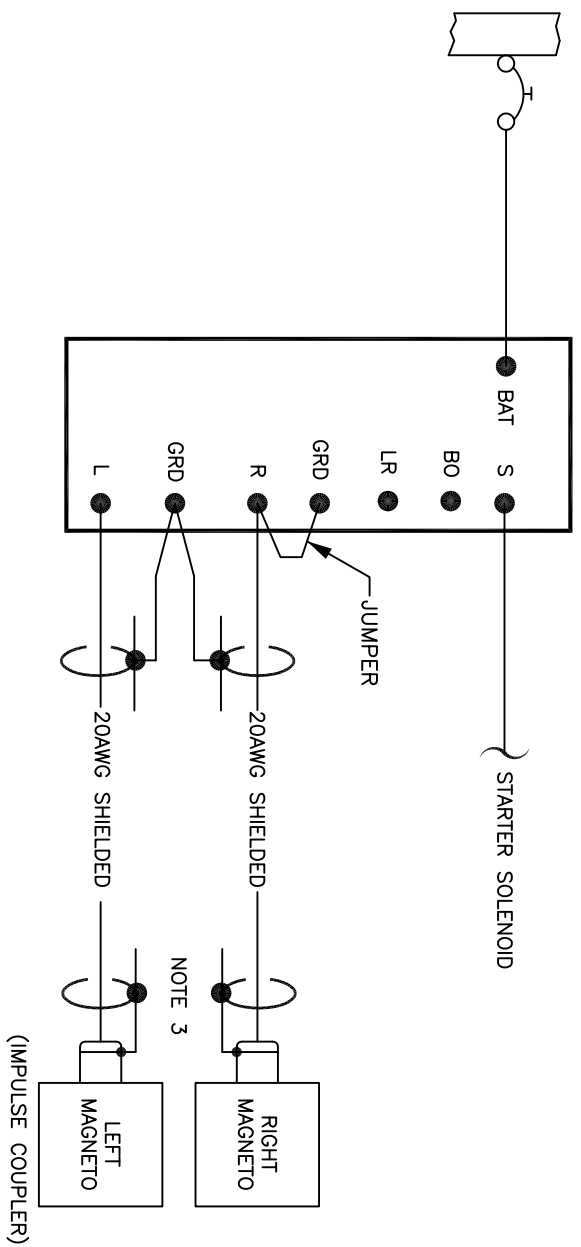

IMPULSE COUPLER STARTING SYSTEM

The AeroElectric Connection
 Medicine River Press
 6936 Bainbridge, Wichita, Kansas 67226

TITLE
 5-POSITION, MAGNETO
 KEYSWITCH - TERMINAL
 CAPTIONS AND SWITCHING
 FUNCTION AND WIRING DIAGRAM

REVISION B DATE 10/29/93 PAGE 1 OF 2