



COMPLETELY DISABLE THE VP-X LIMIT SWITCH FUNCTIONS OR NULLIFY THEM BY PROGRAMMING THEM OUTSIDE THE POINTS WHERE THE MECHANICAL SWITCHES OPERATE.