


NOTES:

1. THIS RESISTOR MAY NEED ADJUSTMENT. 330 OHMS IS A GOOD START. IF THE RADIO IS STILL TOO SENSITIVE IN FORMATION FLIGHT, INCREASE THE RESISTOR VALUE BY 2X STEPS. E.G., NEXT TRY IS 680 OHMS, THIRD TRY IS 1500 OHMS, ETC.

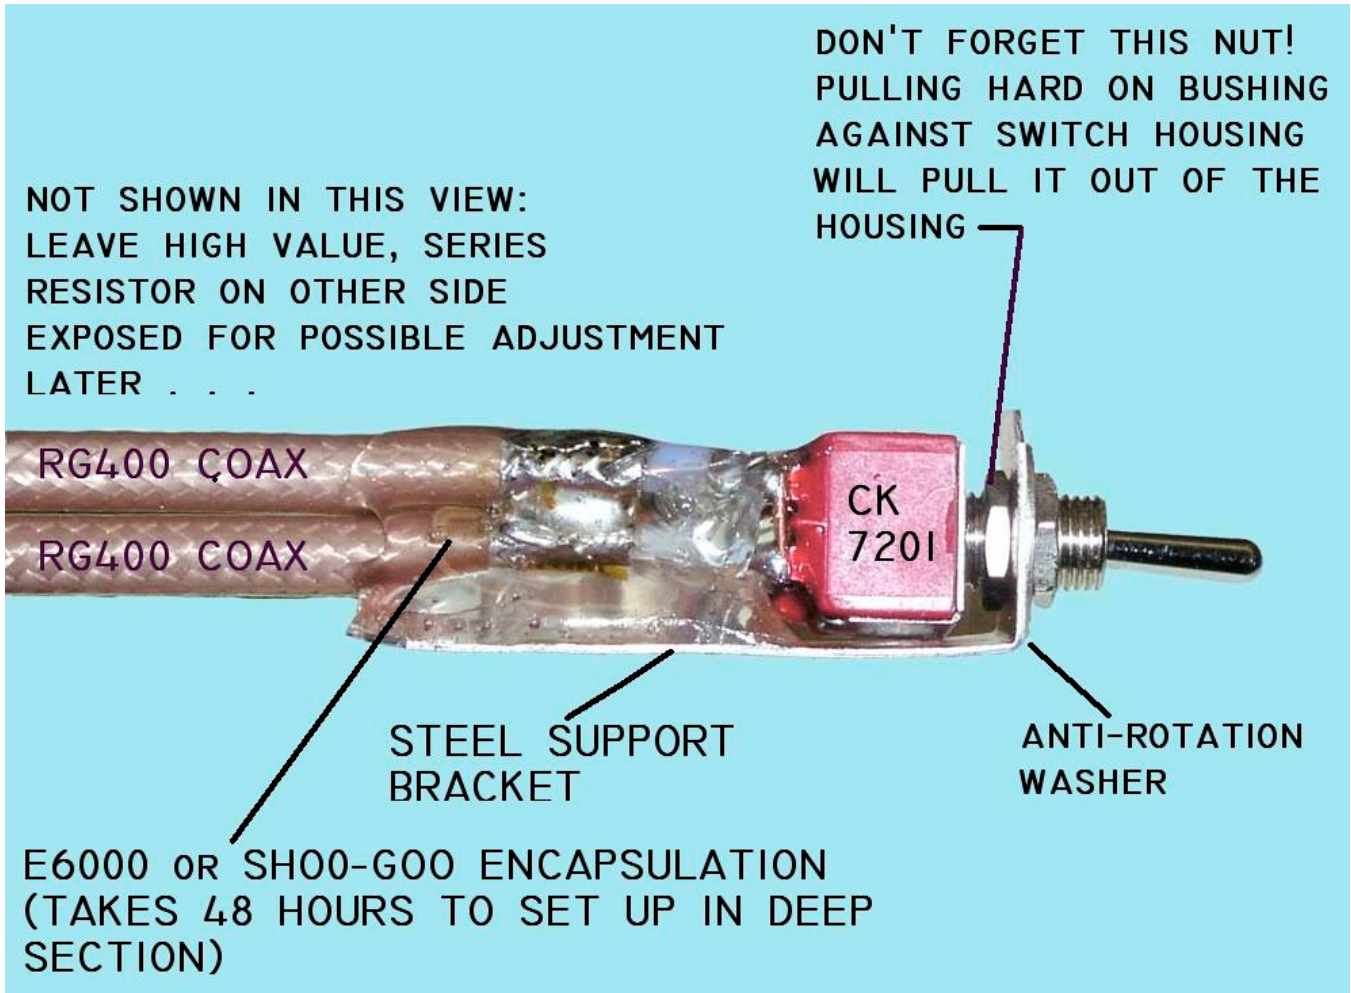

TITLE	PAGE
FORMATION FLYING ATTENUATOR	